EXPAND YOURDRIVING CREACOURIER



DRIVE DESIGN
WIDE & CLEAR FAR VISION
GOOD INTERMEDIATE FOR
DASHBOARD
AND MIRRORS

CREA COURIER

When you drive it is very important to have a wide and clear distance vision field especially to look on lateral mirrors and on the dashboard. COURIER design accomplishes this task providing a lens focused on far and intermediate vision. It is particularly suited for people who spend a lot of time driving and require a progressive lens with easy adaptation and reduced unwanted astigmatism and lateral distortion.



TECHNOLOGIES





DESIGN PARAMETERS





















POWER MAP


CYLINDER MAP

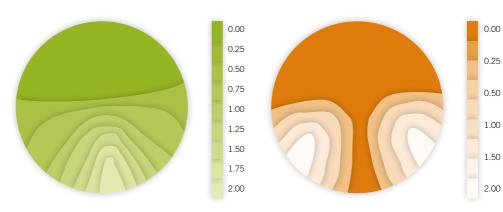

PERFORMANCE

TECHNICAL SPECS

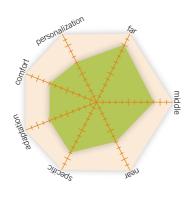

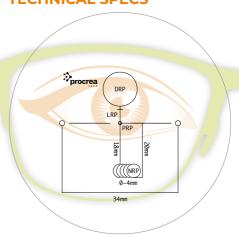

Market Segment	Туре	Allowed Materials	Precalibration	Personalization
Driving Progressive	Hard	All	Yes	Yes

Prism Ref. Point (PRP)	Distance Ref. Point (DRP)	Layout Reference Point (LRP)	Inset	Near Ref. Point (NRP)
Geometrical Center Allowed Range: 0 - 12 mm	+10 mm	+4 mm	0 - 4 mm auto inset	18 mm

Min. Fitting	Max.		Cylinder	Addition
Height	Diameter		Range	Range
20 mm	80 mm	-15 / +15 dpt	-8 / +8 dpt	0.75 / 4.00 dpt





via dei calafati 9/A 70056 Molfetta (Bari) Italy ph. +39 080 919 09 30 fax +39 080 919 09 25 info@procreatech.com procreatech.com